



FABSPEED

MOTORSPORT

EXOTIC CAR PERFORMANCE SPECIALISTS

Porsche 986 Maxflo Performance Exhaust System

SKU: FS.POR.986.MAX



Estimated Install Time

3:00:00

Required Tools

Hydraulic Lift or Floor Jack & Stands
Metric Socket Set w/ Ratchet & Extensions
Metric Open-End Wrench Set
Torx Bits & Driver
Small Flashlight (Optional)
Rubber Mallet (Optional)
Flat-Head Pry Bar (Optional)

CAUTION

- Always allow car to cool before performing any installation(s) or service(s) on it.
- Always be sure to work on an even and level surface when raising vehicle(s) with a jack, and support all raised vehicles with locked jack stands once elevated.
- Fabspeed Motorsport recommends that all installations be supervised or verified by a trained professional technician.
- Fabspeed Motorsport is not responsible for any personal injury or damage(s) sustained to a vehicle during installation of aftermarket performance parts.

INSTALL GUIDE

- 1) Lift car and remove rear wheels.



- 2) Spray all necessary OEM hardware and exhaust connections with rust penetrant.
- 3) Remove (2) 13mm nuts from secondary cat mounting bracket on both sides of the vehicle.



- 4) Loosen (2) 13mm sleeve clamps on both sides and slide the clamps out of the way.



- 5) Support muffler as a safety precaution while unbolting it from the rear of the vehicle.


- 6) Remove (2) 13mm bolts from the lower center muffler mounting bracket.



- 7) Remove (2) 13mm nuts from upper center muffler mounting bracket located in the center of the vehicle above the transmission. See photo in step 13 for bolt location. *NOTE: Keep these bolts for reinstallation.*



- 8) Lower and remove factory muffler from the vehicle.

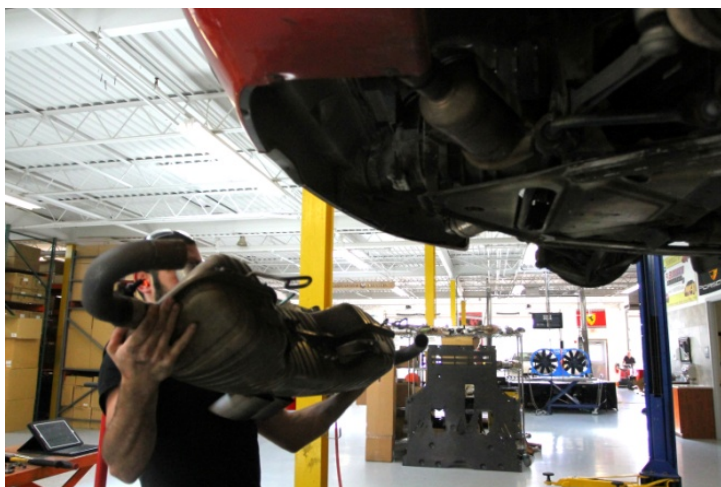

USA

9) Remove (3) 13mm nuts and bolts from the flange connecting the inlet pipe to the header.



10) Remove secondary catalytic converters from the vehicle.



11) Remove (2) 6mm Allen fasteners securing the upper muffler mounting bracket to the factory muffler.



12) Attach provided muffler support bracket to factory upper muffler mounting bracket using 13mm bolt and 6mm Allen fasteners.



13) Re-attach upper center mounting bracket with Fabspeed mounting bracket attached, using the 13mm factory bolts that were removed in step 7.



14) Identify left and right inlet pipes and position in vehicle.



- 15) Using supplied hardware, insert (3) 13mm bolts with washers and attach to header flange. *NOTE: Do not tighten at this stage.*
- 16) Connect left and right Maxflo mufflers together using the provided 15mm Accu-seal clamp.



- 17) Insert the provided muffler band straps through the Fabspeed mounting bracket.
- 18) Lift Maxflo system into rear of vehicle and attach band straps.



- 19) Line up connection between Maxflo mufflers and inlet pipes and attach with the provided v-bands clamps.



- 20) Tighten all necessary hardware: flange bolts connecting inlet pipes to header, v-bands connecting inlet pipes to mufflers, and the Accu-seal clamp connecting right and left mufflers together.
- 21) Lower car and align the tips so that they are even and to your liking. Tighten the 13mm bolt on the back of each tip to secure them into position.



- 22) Re-install wheels and enjoy your new Fabspeed performance exhaust!

If you have any questions, comments, or concerns related to your product, please contact us!



FABSPEED
MOTORSPORT
 EXOTIC CAR PERFORMANCE SPECIALISTS

