



FABSPPEED

MOTORSPORT

EXOTIC CAR PERFORMANCE SPECIALISTS

Porsche 987.2 Boxster/Cayman Race Exhaust System



Estimated Install Time

1:30:00

Required Tools

Commercial Lift (or Hydraulic Floor Jack & Stands)
Pole Jacks (x2) or Jack Stands (x2)
Socket Driver or Impact Wrench
12" Socket Extension
Swivel Socket Adaptor
10mm, 13mm, 15mm & 19mm Sockets
13mm Open-End Wrench
T-20 Torx Driver/Bit
Small Flashlight (Optional)

CAUTION

- Always allow car to cool before performing any installation(s) or service(s) on it.
- Always be sure to work on an even and level surface when raising vehicle(s) with a jack, and support all raised vehicles with locked jack stands once elevated.
- Fabspeed Motorsport recommends that all installations be supervised or verified by a trained professional technician.
- Fabspeed Motorsport is not responsible for any personal injury or damage(s) sustained to a vehicle during installation of aftermarket performance parts.

INSTALL GUIDE



1. Raise car off of the ground and remove the rear wheels.



2. Remove (3) fasteners holding plastic cover inside rear wheel wells and remove cover.



3. Loosen – *but do not remove* – (3) flange nuts.

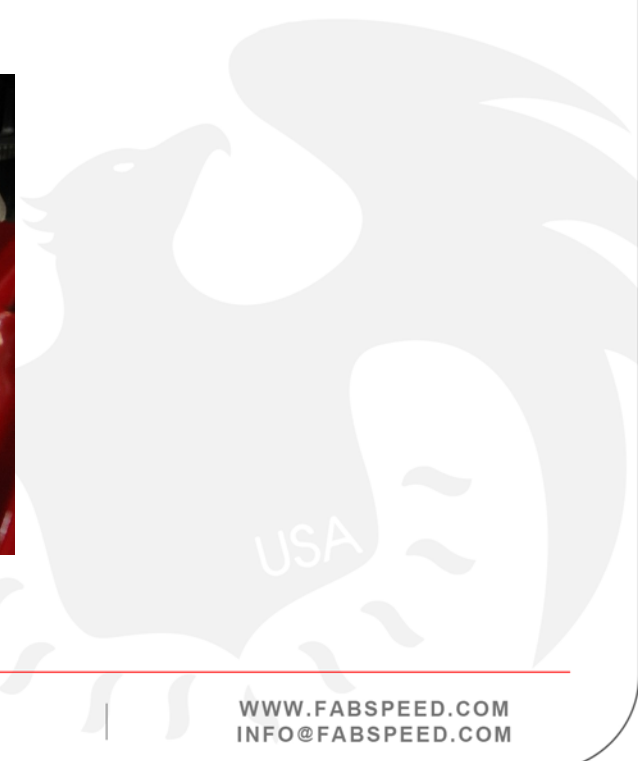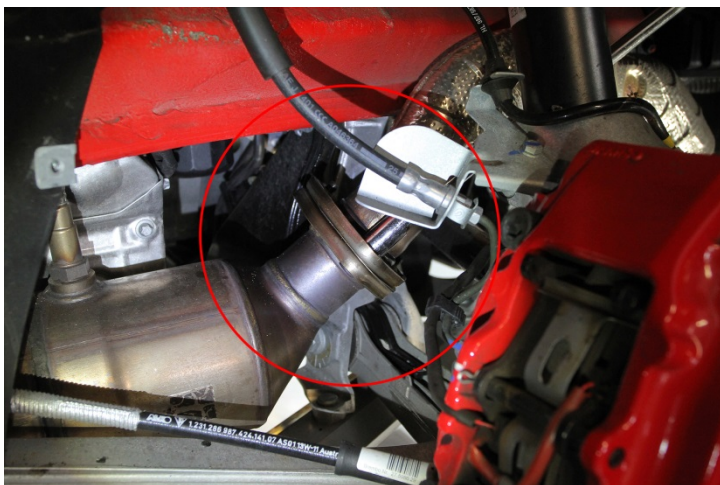


- 4. Support mufflers with pole jacks or jack stands.



- 5. Remove loosened flange nuts.



- 6. Remove (2) bolts from each side of the muffler hanger brackets.

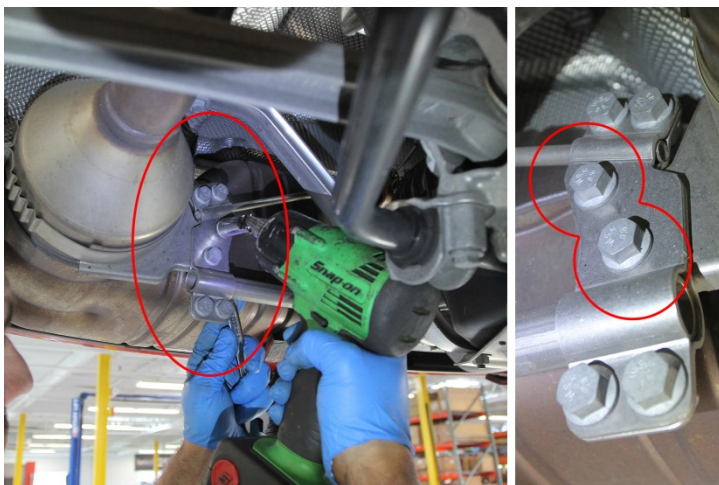

7. Lower and remove factory exhaust.




8. Assemble slip-joint sections of Fabspeed tubing and slide band clamps on.



9. Position Fabspeed tubing and slip flange onto factory flange bolts.




10. Hand tighten flange nuts; leave loose enough to re-position.

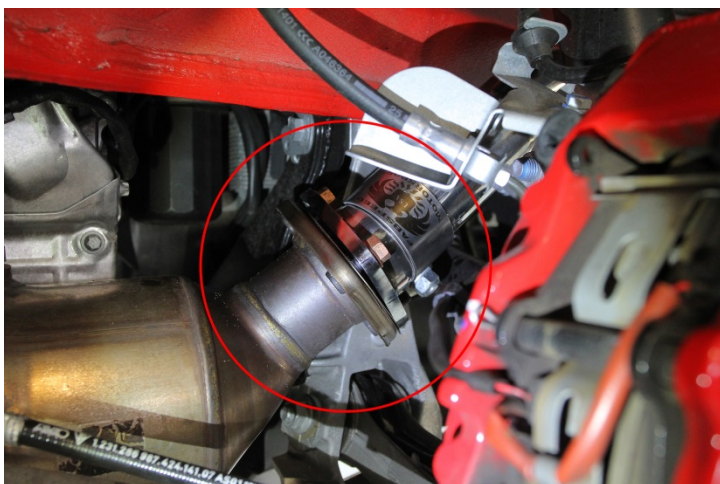

11. Assemble center section of Fabspeed system by connecting center slip joints and slide remaining band clamp on.



12. Position Fabspeed center section on vehicle and hand-tighten bracket bolts.

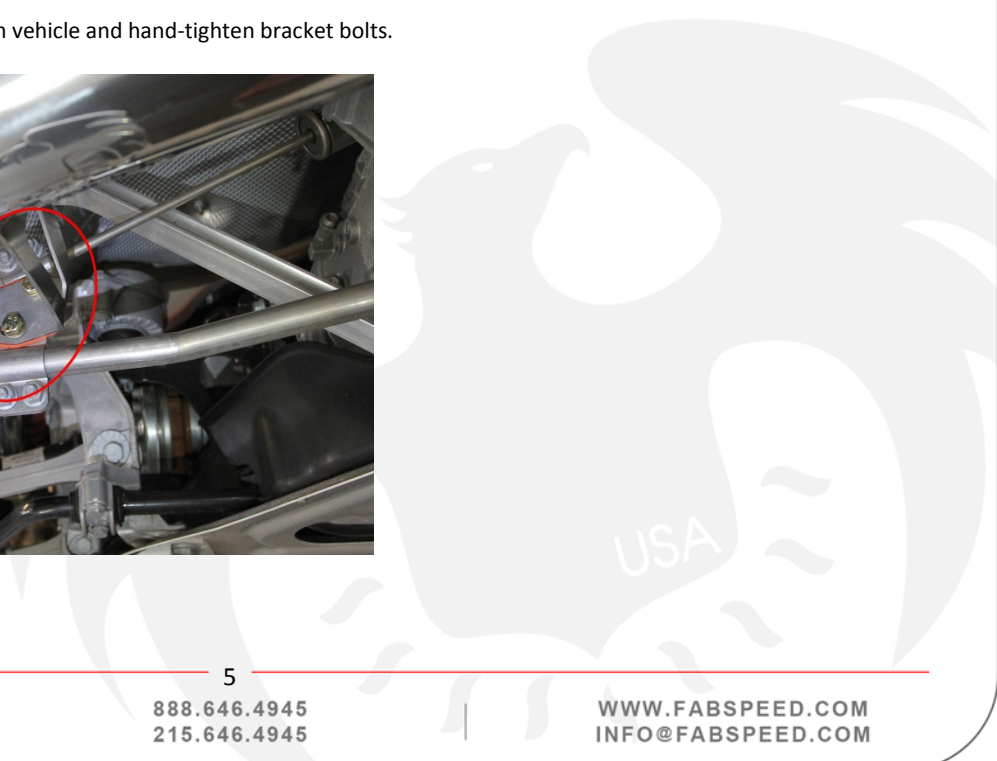


13. Apply and tighten v-band clamp to join the Fabspeed center section to the inlet tubing.




14. Tighten flange nuts.




15. Position and tighten band clamp over the slip joint closest to the flange.

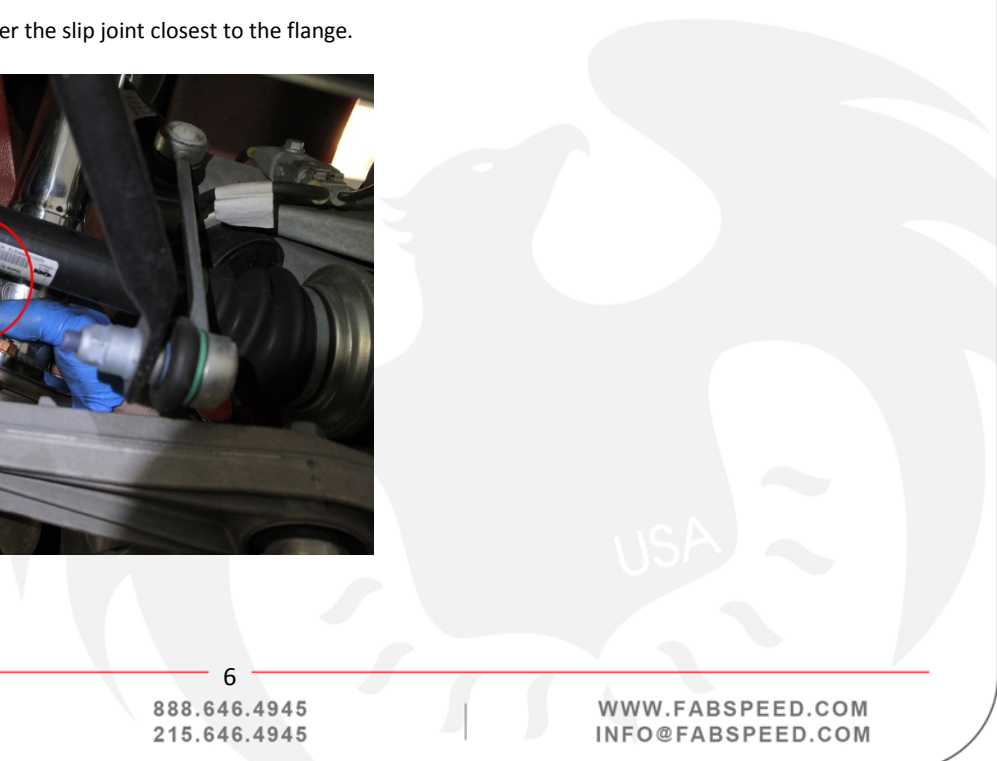



16. Tighten bracket bolts until snug; do not over-tighten, as crushing the vibration dampening gasket may cause damage.

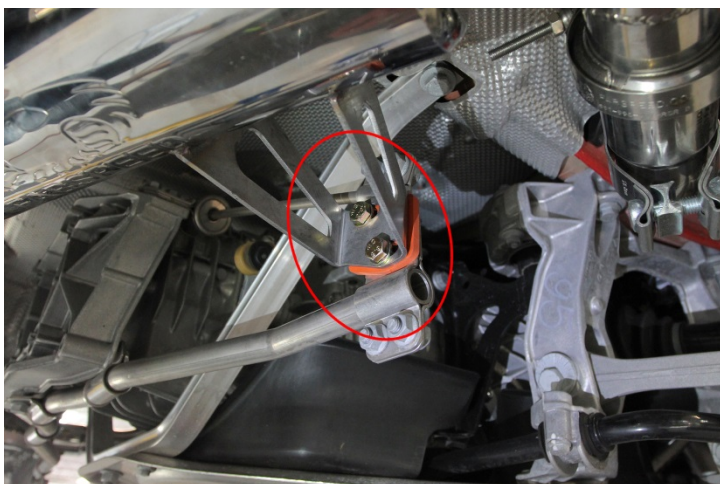


17. Verify alignment of both sides and tighten center section band clamp.

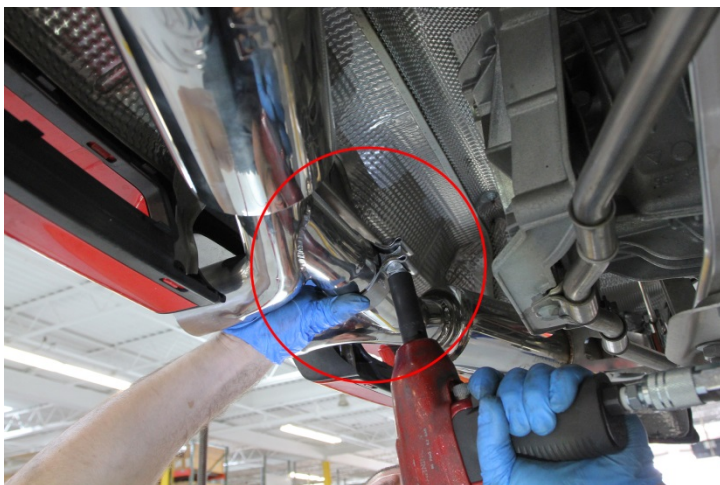

18. Tighten remaining band clamp over the center slip joint on the inlet tubing.

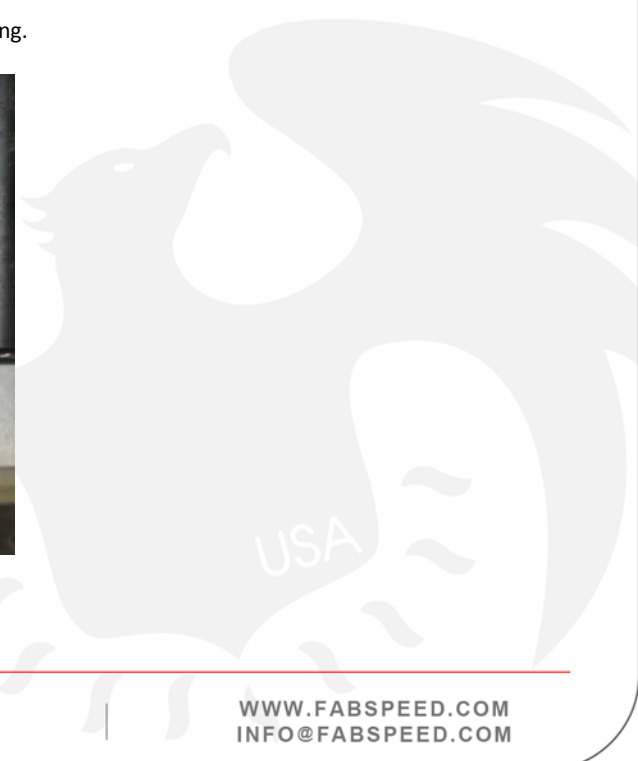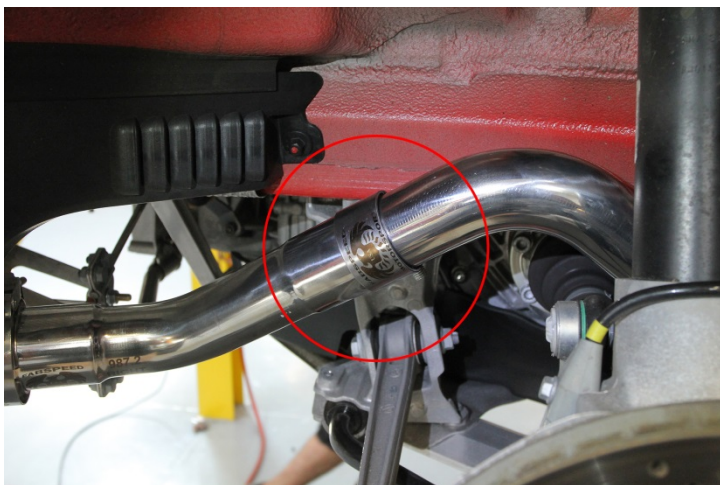


19. Position Fabspeed outlet tips on the center section outlet pipes and tighten mounting bolts.

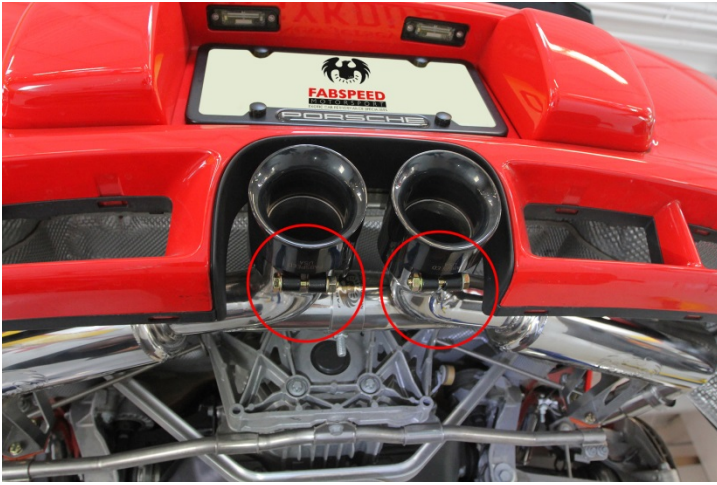

20. Enjoy and show off your new Fabspeed Motorsport exhaust system!



If you have any questions, comments, or concerns related to your new part(s), please contact us!

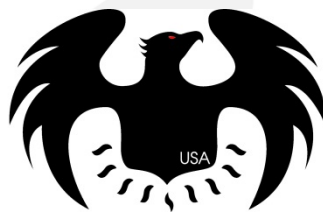

FABSPEED
MOTORSPORT
EXOTIC CAR PERFORMANCE SPECIALISTS