



# FABSPPEED

## MOTORSPOORT

EXOTIC CAR PERFORMANCE SPECIALISTS

### **Porsche 991 Carrera Sport Headers**

SKU: FS.POR.991.SHDR



#### **Estimated Install Time**

2:00:00

#### **Required Tools**

*Hydraulic Lift or Floor Jack & Stands  
Metric Socket Set w/ Ratchet & Extensions  
Metric Open-End Wrench Set  
Inverted Torx Bits & Driver*

#### **CAUTION**

- *Always allow car to cool before performing any installation(s) or service(s) on it.*
- *Always be sure to work on an even and level surface when raising vehicle(s) with a jack, and support all raised vehicles with locked jack stands once elevated.*
- *Fabspeed Motorsport recommends that all installations be supervised or verified by a trained professional technician.*
- *Fabspeed Motorsport is not responsible for any personal injury or damage(s) sustained to a vehicle during installation of aftermarket performance parts.*

INSTALL GUIDE


1. Using a 22mm wrench (or an O2 sensor socket), remove the front O2 sensor from the factory header.



2. Remove the rear O2 sensor.



3. Loosen and remove the (3) 12mm flange nuts.

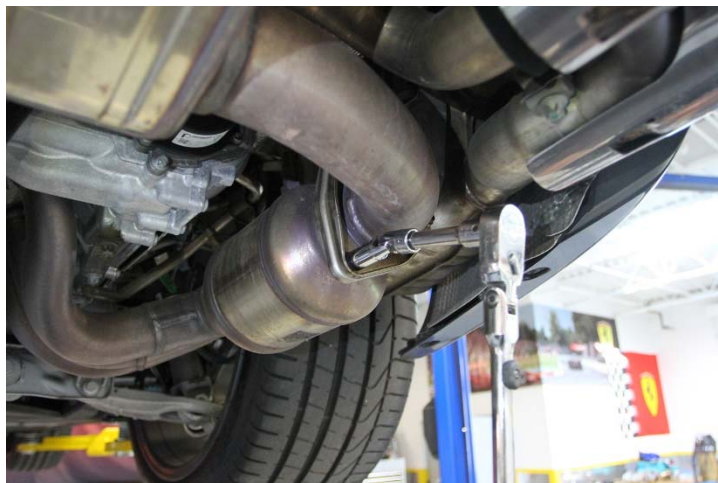

- Using an E12 inverted Torx bit, remove the (9) bolts securing the header to the engine block.



- Remove factory header from the vehicle.




- Before fully installing the Fabspeed header, re-install the O2 sensors while you have better access.




- Once O2 sensors are installed, place the header against the engine block (with a gasket in between) and re-install the (9) E12 bolts.



- Install and tighten the (3) supplied 13mm flange bolts and nuts. (Remember to re-install the gasket.)

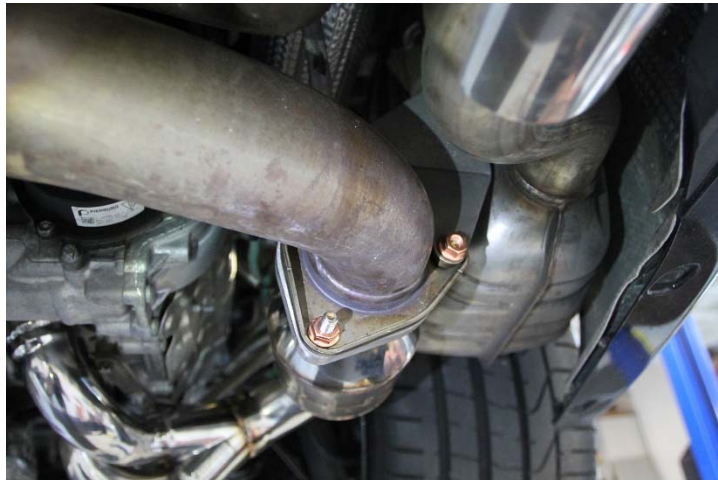

- Repeat steps 1 through 8 on the remaining header to complete installation.

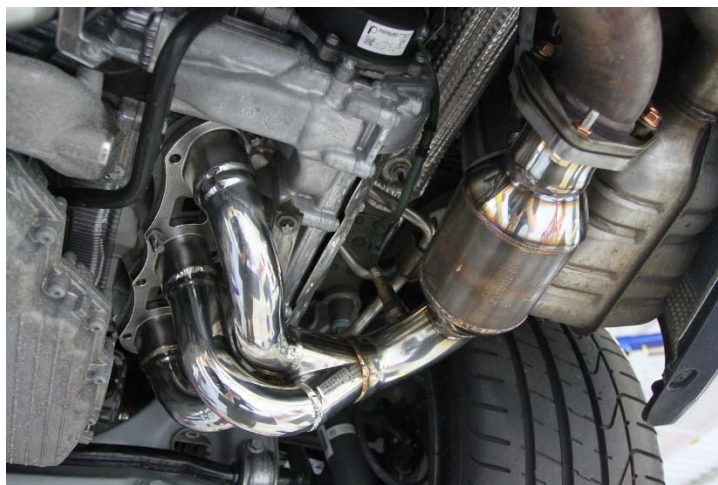

*If you have any questions, comments, or concerns related to your product, please contact us!*