



FABSPEED

MOTORSPORT

EXOTIC CAR PERFORMANCE SPECIALISTS

Porsche 996 Carrera Catbypass X-Pipe

SKU: FS.POR.996.CBX



Estimated Install Time

2:00:00

Required Tools

Commercial Floor Lift or Jack & Stands

Socket Driver

5mm Allen/hex wrench

13mm socket

17mm socket

13mm wrench

22mm wrench

Rust Penetrant Spray (optional)

Small Flashlight (optional)

CAUTION

- *Always allow car to cool before performing any installation(s) or service(s) on it.*
- *Always be sure to work on an even and level surface when raising vehicle(s) with a jack, and support all raised vehicles with locked jack stands once elevated.*
- *Fabspeed Motorsport recommends that all installations be supervised or verified by a trained professional technician.*
- *Fabspeed Motorsport is not responsible for any personal injury or damage(s) sustained to a vehicle during installation of aftermarket performance parts.*

INSTALL GUIDE



1. Lift car and spray all exhaust joints and bolts with rust penetrant spray if corrosion or rust is present.
2. Using a 17mm socket, remove the (2) bolts securing the slip joint clamp.



3. Using a 13mm socket, remove the bolt for the clamp securing the factory cat sections to the hanger brackets.



4. Using a 22mm wrench, remove the O2 sensor.

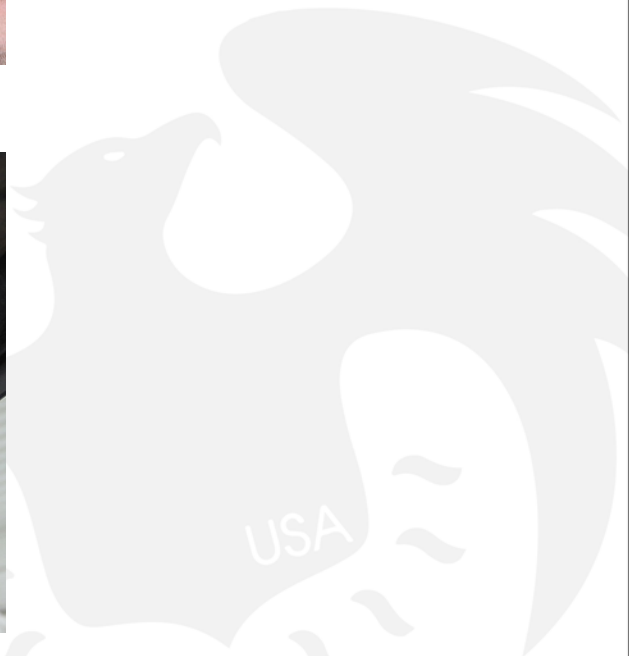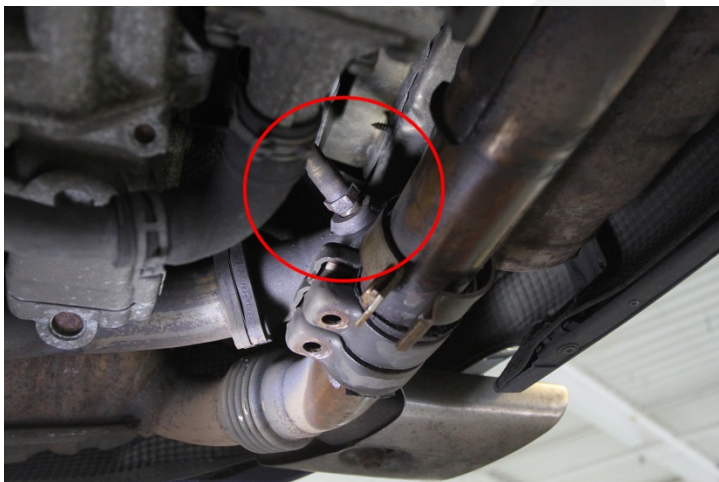


- Using a 13mm socket, remove the (3) flange bolts securing the factory cat sections to the headers.



- Once the flange is free, lower the cat section and remove the second O2 sensor with a 22mm wrench.



- Remove the factory cat sections from the vehicle.

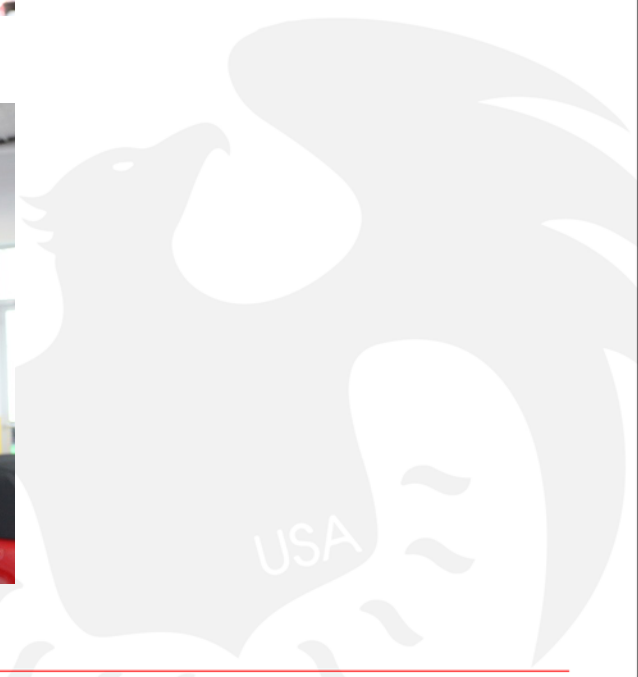



- Using a 13mm socket, remove the (2) bolts securing the hanger bracket and replace with the supplied 5mm hex screws.



- Pre-assemble Fabspeed X-Pipe by sliding an Accu-seal clamp on each end and then inserting the catbypass sections.



- Hold assembled X-Pipe up to vehicle and pre-install both O2 sensors on either side.

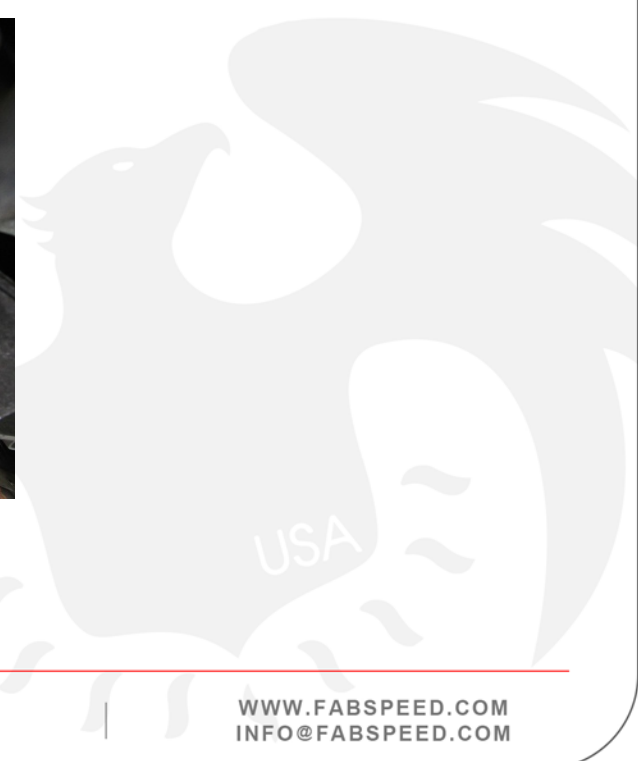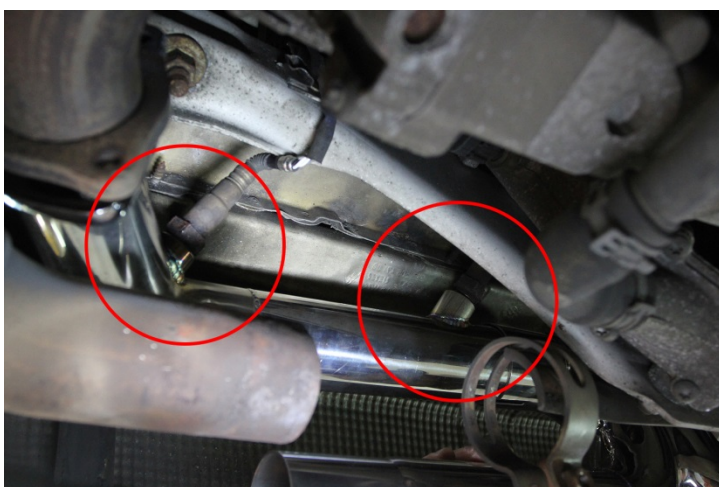

11. Slide slip joint clamps onto the joint between the new Fabspeed X-Pipe and the OEM muffler inlet. Tighten with a 17mm socket.



12. Insert provided gasket and provided flange bolts into the header flange and tighten using a 13mm wrench and socket.



13. Using a 13mm socket, position and tighten OEM band clamp to secure the new Fabspeed X-Pipe to the hanger bracket.



If you have any questions, comments, or concerns related to your new part(s), please contact us!