



FABSPEED

MOTORSPORT

EXOTIC CAR PERFORMANCE SPECIALISTS

Porsche 997.2 Carrera Sport Headers

SKU: FS.POR.9972.SHDR



Estimated Install Time

2:00:00

Required Tools

*Hydraulic Lift or Floor Jack & Stands
Metric Socket Set w/ Ratchet & Extensions
Metric Open-End Wrench Set
Inverted Torx Bits & Driver
Small Flashlight (Optional)
Rubber Mallet (Optional)
Flat-Head Pry Bar (Optional)*

CAUTION

- *Always allow car to cool before performing any installation(s) or service(s) on it.*
- *Always be sure to work on an even and level surface when raising vehicle(s) with a jack, and support all raised vehicles with locked jack stands once elevated.*
- *Fabspeed Motorsport recommends that all installations be supervised or verified by a trained professional technician.*
- *Fabspeed Motorsport is not responsible for any personal injury or damage(s) sustained to a vehicle during installation of aftermarket performance parts.*

INSTALL GUIDE

1. Lift car and remove rear wheels.



2. Using a 22mm wrench, remove the front O2 sensor.




3. Using a 13mm socket, remove the (3) flange nuts from the studs.





- Using a pry bar, free the muffler bracket from the studs.



- Using an E-12 inverted Torx (or a 10mm socket), loosen and remove the (9) bolts securing the header flange to the block. *(NOTE: Loosen by hand before attempting to use any electric or pneumatic tools.)*

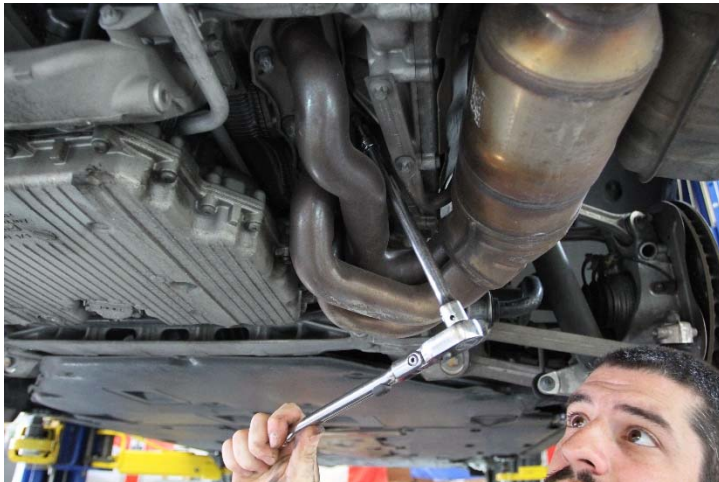

- Support the header and use a 22mm wrench to the remove the remaining O2 sensor.

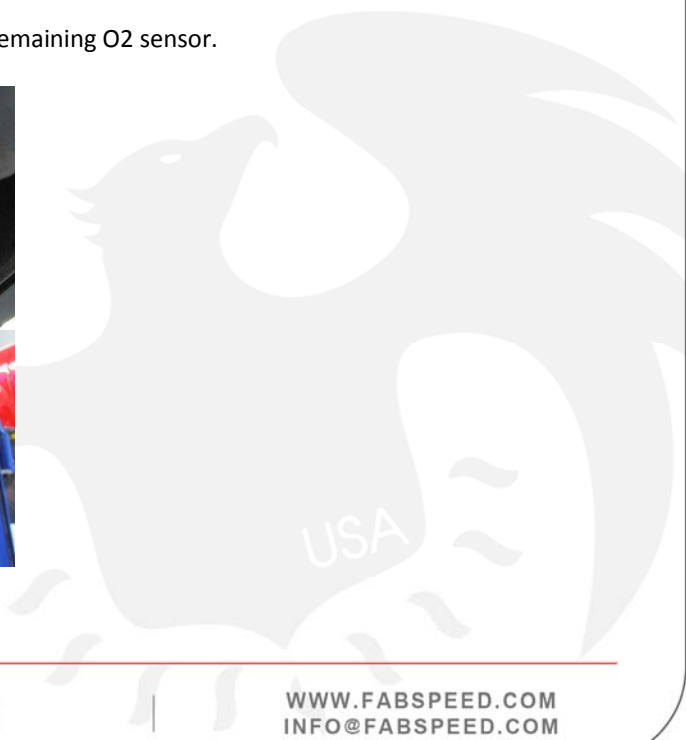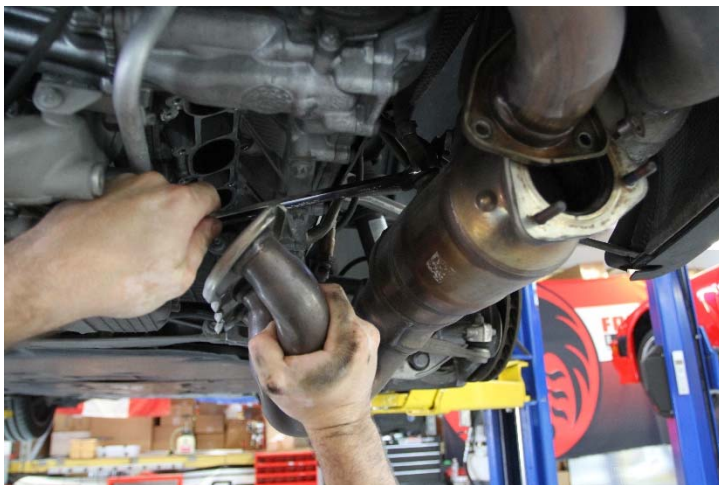


7. Remove the factory header from the vehicle.



8. Hang Fabspeed header and re-thread the rear O2 sensor and tighten with a 22mm wrench.



9. Thread the front O2 sensor and tighten with 22mm wrench.

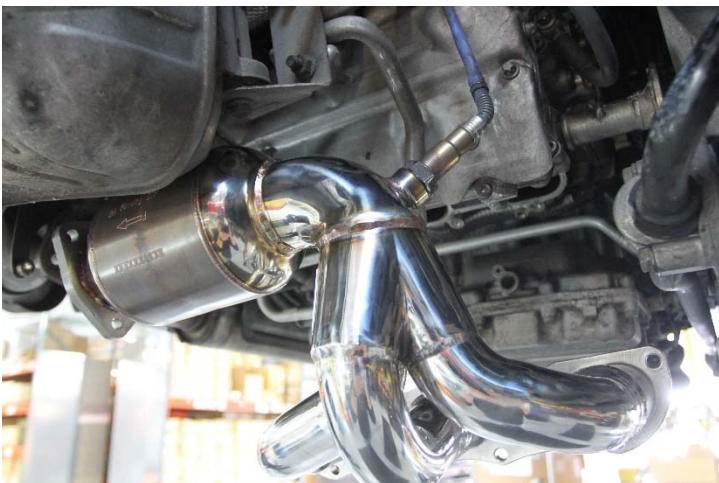

10. Re-thread the (9) flange bolts into the block. *(NOTE: Do not tighten yet.)*



11. Re-position muffler bracket and insert/thread supplied 13mm hardware.



12. Tighten the (9) flange bolts using an E-12 inverted Torx (or 10mm socket). *Use hand tools only!*



13. Tighten the 13mm nuts and bolts.



14. Repeat steps 2 through 13 on the opposite side of the vehicle to complete installation.

If you have any questions, comments, or concerns related to your product, please contact us!



FABSPEED
MOTORSPORT
EXOTIC CAR PERFORMANCE SPECIALISTS

