




# FABSPPEED

## MOTORSPORT

EXOTIC CAR PERFORMANCE SPECIALISTS

### **Porsche 997.2 Carrera Competition Intake System**

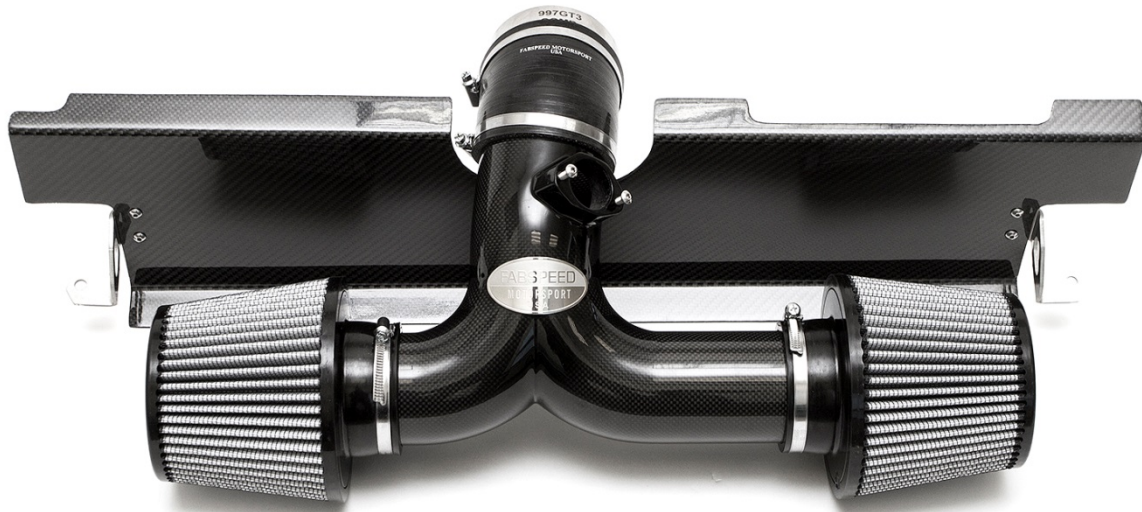

#### **Estimated Install Time**

0:30:00

#### **Required Tools**

Socket Driver or Impact Wrench  
6" Socket Extension  
13mm Socket  
13mm Open-End Wrench  
T-20 & T-25 Torx Driver/Bit  
3mm Hex/Allen Wrench  
Needle-Nose Pliers  
Flat Head Screwdriver  
Zip Ties (x2) -or- Wire Loom -or- Electrical Tape

#### **CAUTION**

- Always allow car to cool before performing any installation(s) or service(s) on it.
- Always be sure to work on an even and level surface when raising vehicle(s) with a jack, and support all raised vehicles with locked jack stands once elevated.
- Fabspeed Motorsport recommends that all installations be supervised or verified by a trained professional technician.
- Fabspeed Motorsport is not responsible for any personal injury or damage(s) sustained to a vehicle during installation of aftermarket performance parts.

INSTALL GUIDE


1. Unplug the mass airflow sensor connector.



2. Loosen the hose clamp securing the rubber intake hose to the factory airbox.



3. Remove all of the fasteners around the perimeter of the factory airbox lid.

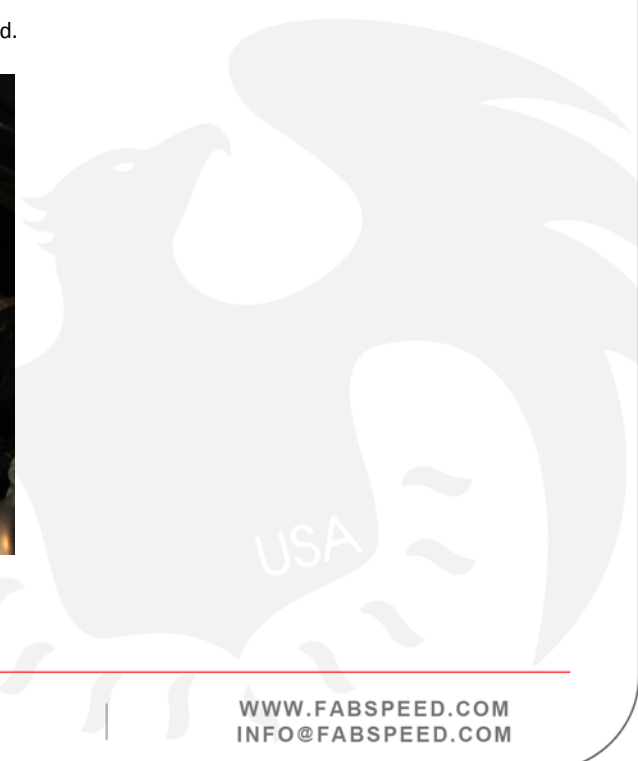


4. Remove the factory airbox lid.



5. Remove the screw securing each of the factory air filters.



6. Remove factory air filters.

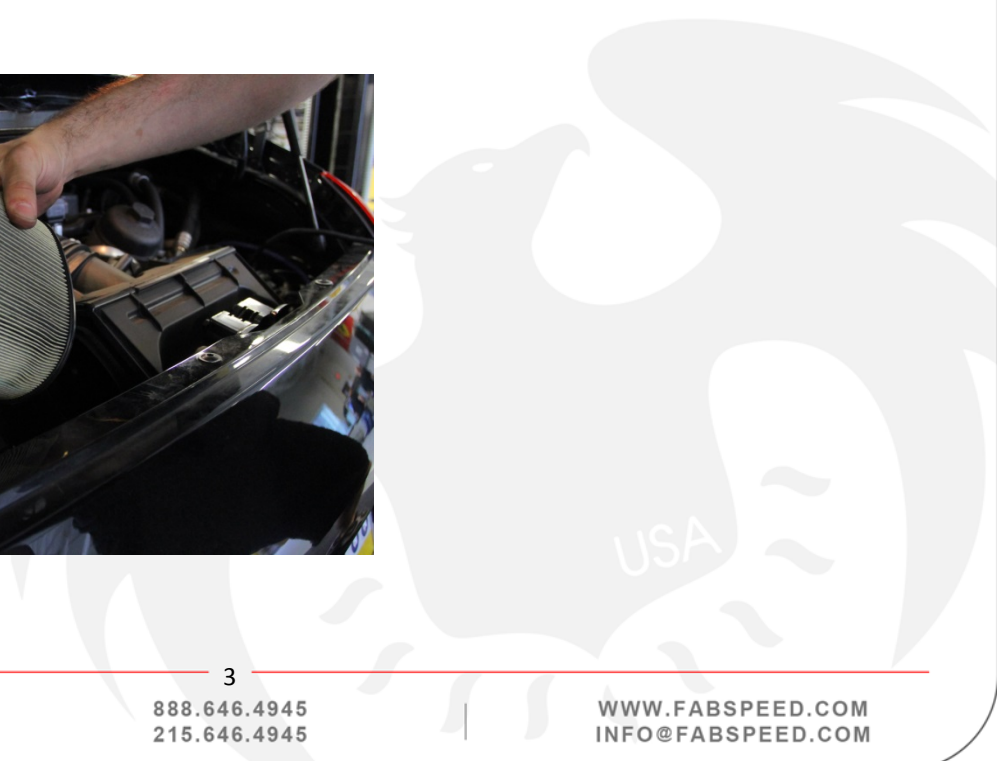

7. Separate intake hose from factory airbox.



8. Pull factory airbox up and away from engine bay to access the vacuum line connected to the bottom.



9. Remove vacuum line from airbox connection and secure/hide line in engine bay using zip ties, wire loom, or electrical tape.




10. Unscrew mass airflow sensor from the factory airbox.




11. Remove factory mass airflow sensor for re-use on new Fabspeed intake.




12. Insert factory mass airflow sensor into Fabspeed intake tube and tighten hex/allen screws.

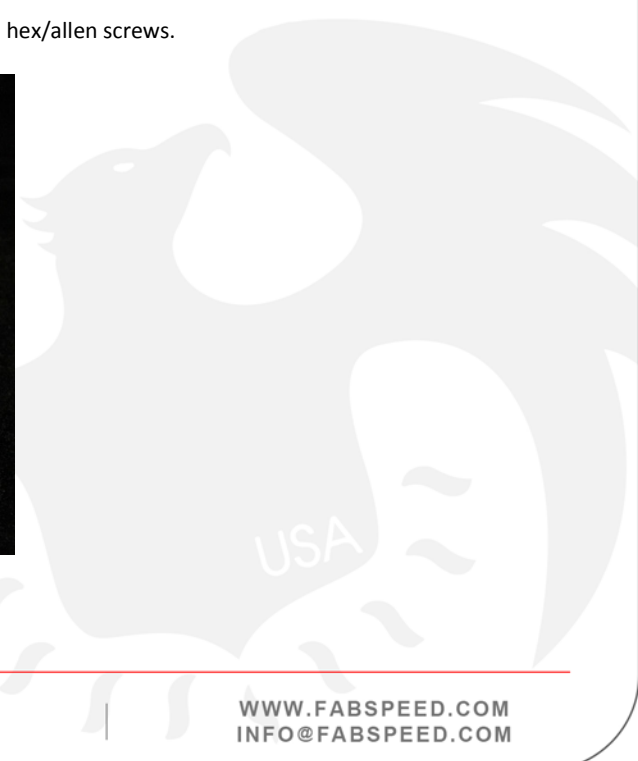



13. Remove inner bolt from both sides of the engine bay.

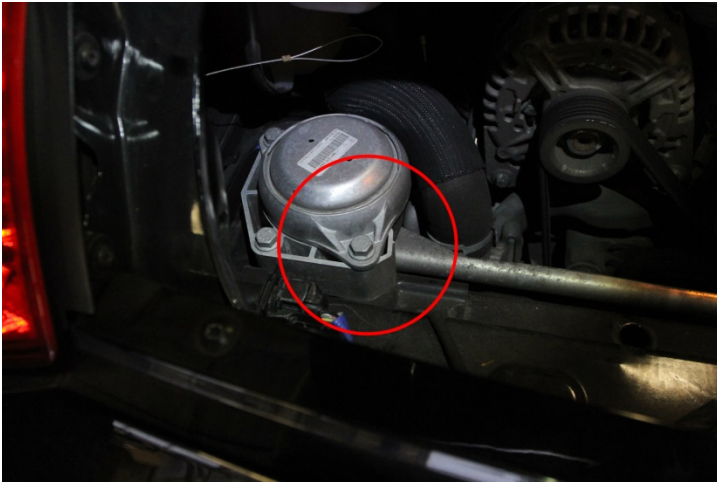


14. Insert new Fabspeed carbon fiber heat shield and replace & tighten bolts. **NOTE:** *Be sure the heat shield is mounted on top of the bracket, not behind it.*

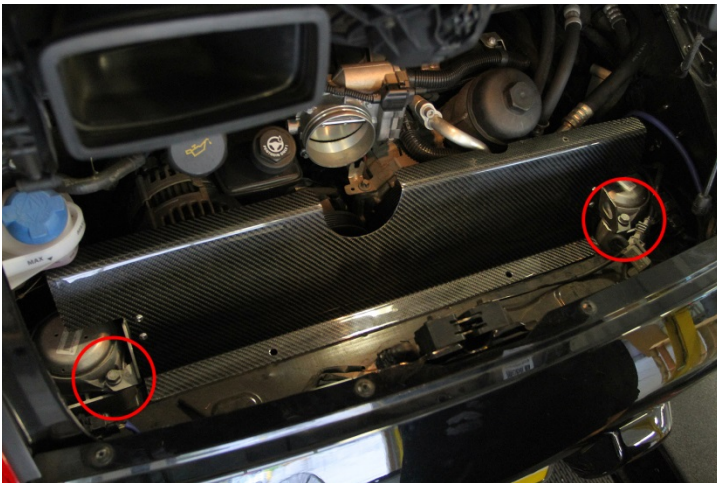


15. Assemble new Fabspeed intake system by slipping filters and rubber coupler sleeve onto the carbon y-tube. (*Do not tighten hose clamps yet.*)

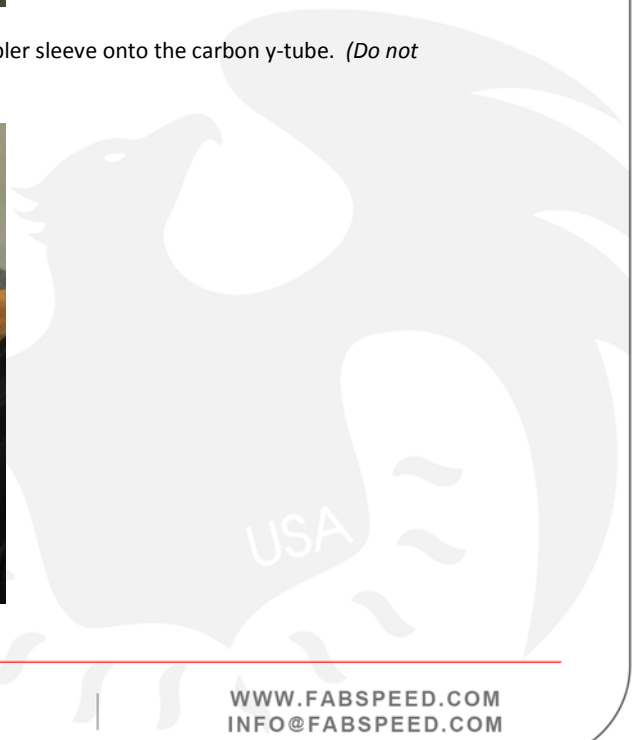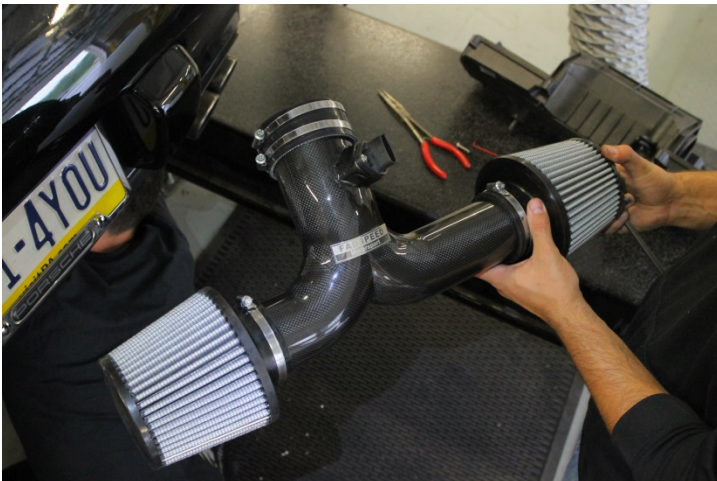

16. Place intake into engine bay and slide coupler onto throttle body. Tighten hose clamps to secure coupler.

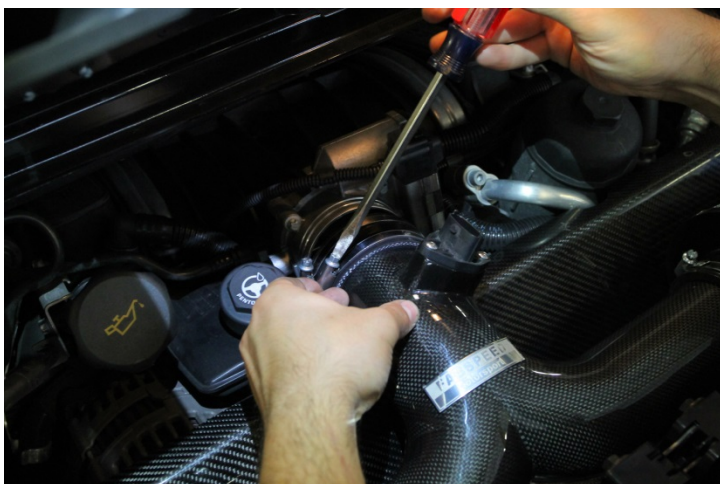

17. Position intake as needed and tighten remaining couple hose clamp on to the throttle body.

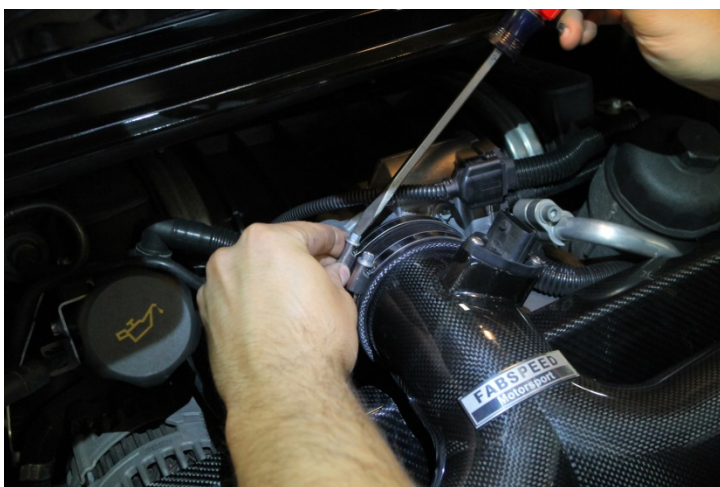

18. Position air filters and tighten hose clamps.




19. Plug in mass airflow sensor connector.



20. Enjoy and show off your new carbon fiber Fabspeed Motorsport intake!



*If you have any questions, comments, or concerns related to your new part(s), please contact us!*

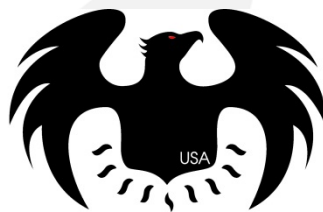

**FABSPEED**  
**MOTORSPORT**  
EXOTIC CAR PERFORMANCE SPECIALISTS