



FABSPPEED

MOTORSPORT

EXOTIC CAR PERFORMANCE SPECIALISTS

Porsche 997.2 Carrera Maxflo Side Mufflers



Estimated Install Time

0:45:00

Required Tools

Commercial Lift (or Hydraulic Floor Jack & Stands)
Socket Driver or Impact Wrench
12" Socket Extension
Swiveling Socket Adaptor
10mm, 13mm & 19mm Sockets
T30 Torx Driver/Bit
13mm Wrench
Small Flashlight (Optional)

CAUTION

- Always allow car to cool before performing any installation(s) or service(s) on it.
- Always be sure to work on an even and level surface when raising vehicle(s) with a jack, and support all raised vehicles with locked jack stands once elevated.
- Fabspeed Motorsport recommends that all installations be supervised or verified by a trained professional technician.
- Fabspeed Motorsport is not responsible for any personal injury or damage(s) sustained to a vehicle during installation of aftermarket performance parts.

INSTALL GUIDE

1. Raise car off of the ground and remove the rear wheels.



2. Remove the fastener securing the bottom of the bumper support rod inside the rear wheel well.



3. Remove the fastener securing the top of the bumper support rod and remove the support.




4. Loosen and remove factory exhaust tip. *(This is not strictly required, but allows easier access to the flange nuts in Step 5.)*




5. Remove (2) flange nuts securing the factory muffler bracket to the flange.



6. Remove (2) mounting bolts near the front of the muffler, inside the rear wheel well.

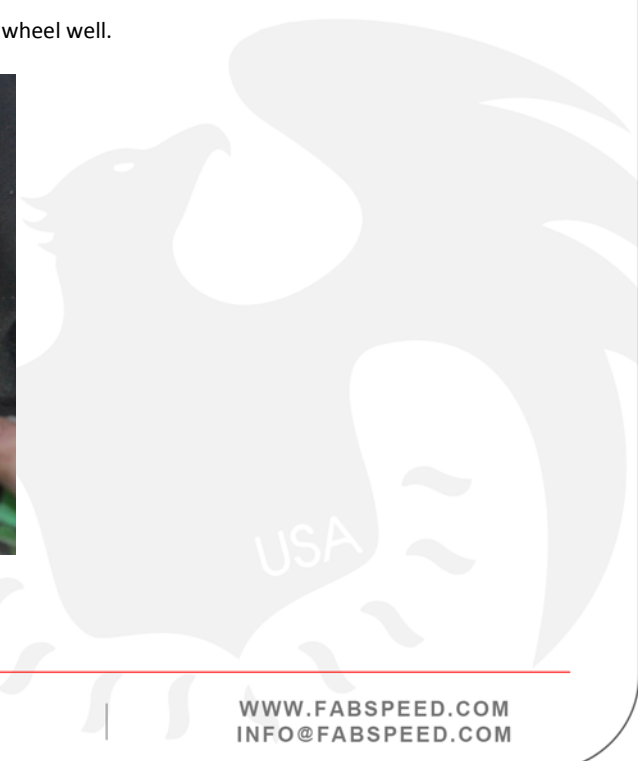


7. Loosen/remove bolts from the factory couple just inside the outlet opening in the rear bumper.

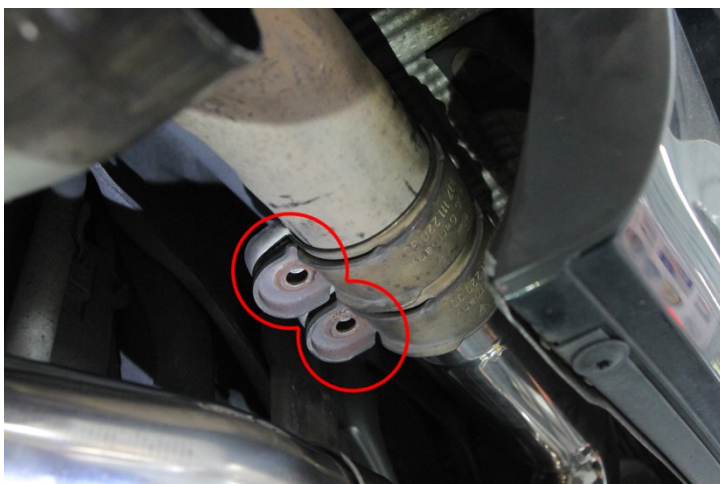

8. Slide couplers toward the outside of the car to separate factory side muffler from the center pipe.



9. Remove factory side muffler from the vehicle by pulling it out forward through the rear wheel well.

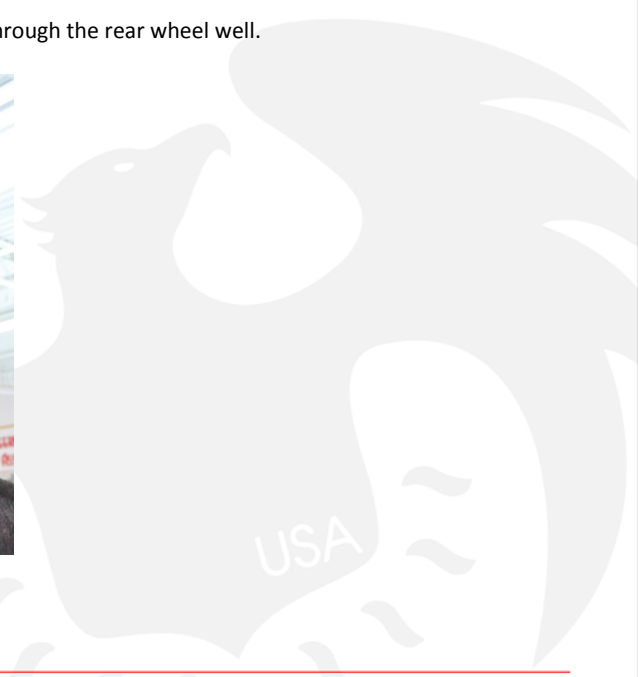

10. Repeat Steps 2-9 on the opposite side of the vehicle
11. Remove factory muffler mounting bracket and attach to Fabspeed Maxflo Muffler.



12. Re-install Fabspeed Maxflo Mufflers by following steps 2-9 in reverse order on both sides of the vehicle.
13. Enjoy and show off your new genuine Fabspeed Motorsport Maxflo exhaust products!

If you have any questions, comments, or concerns related to your new part(s), please contact us!



FABSPEED
MOTORSPORT
EXOTIC CAR PERFORMANCE SPECIALISTS

INSTALL
GUIDE