



# FABSPEED

## MOTORSPO

EXOTIC CAR PERFORMANCE SPECIALISTS

### **Porsche Macan Maxflo Performance Exhaust System**

SKU: FS.POR.MCNT.MAX & FS.POR.MCNS.MAX



#### **Estimated Install Time**

2:00:00

#### **Required Tools**

*Metric Socket Set w/ Ratchet & Extensions  
Pipe Cutter or Sawz-All*

#### **CAUTION**

- *Always allow car to cool before performing any installation(s) or service(s) on it.*
- *Always be sure to work on an even and level surface when raising vehicle(s) with a jack, and support all raised vehicles with locked jack stands once elevated.*
- *Fabspeed Motorsport recommends that all installations be supervised or verified by a trained professional technician.*
- *Fabspeed Motorsport is not responsible for any personal injury or damage(s) sustained to a vehicle during installation of aftermarket performance parts.*

INSTALL GUIDE


1. Lift the vehicle and locate the dimples on the factory exhaust system. *(Marked in yellow on the photo below.)*



2. Scribe a cutting guide line around the tubing at the middle dimples.



3. Using the method of your choice, cut the tubing at the marks and remove the rear section of the factory exhaust, leaving all rubber mounts and hangers in place.

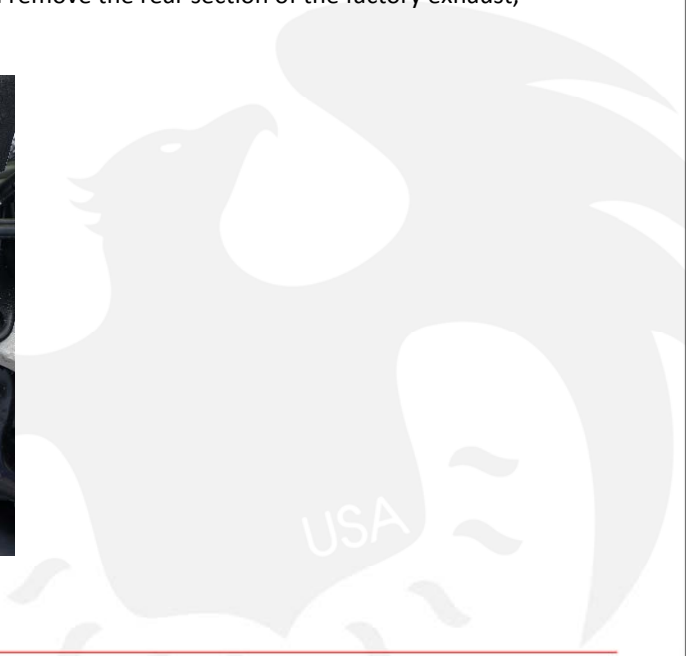

4. Hang the Fabspeed exhaust in place and insert the rod brackets into the factory rubber hangers. Slide the open end of the Fabspeed inlet tube over the factory exhaust tubing and tighten the supplied 15mm Accu-seal clamp in place to secure the system.




5. Slide the Fabspeed tips onto the muffler outlets and set to desired position before tightening the set clamps.



6. Enjoy your new performance exhaust system from Fabspeed Motorsport!

*If you have any questions, comments, or concerns related to your product, please contact us!*

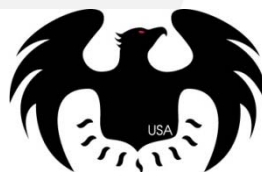

**FABSPEED**  
**MOTORSPORT**  
 EXOTIC CAR PERFORMANCE SPECIALISTS